



ATTENTION, PLEASE READ THESE INSTRUCTIONS CAREFULLY
Inform your workers of these rules and use this manual as a referral

1. GENERAL INFORMATION

Please read the information contained herein so that you can become familiar with your device quickly and take advantage of the full scope of its functions.

Slimmer will serve you for many years if you handle it, care for it properly and follow these instructions. We wish you the best experience with this unique product.

2. INFORMATION ON THIS MANUAL

These Operating Instructions are a component of the device (referred to hereafter as the Device) and provide you with the essential information on preparing, operating, cleaning and keeping the Device.

Keep this Operating Manual in a safe place and pass it on to anyone who will be using it.

A. Warning notices

The following notices are used in the Operating Manual:



Danger. Follow this manual to avoid serious injuries and important security issues.



Warning. Follow this manual to avoid situations that could lead to danger.



Please Note. Additional information which will simplify the handling of the machine.

B. Limitation of liability

The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
- Uses for non-intended purposes
- Improper repairs
- Technical alterations, modifications of the device
- Use of unauthorized spare parts

All translations are carried out to the best of our knowledge. We do not assume any liability for translation errors, not even if the translation was carried out by us or on our instructions.

C. Copyright protection

This document is copyright protected.

Cocina sin límites S.L. reserves all the rights, including those for photomechanical reproduction, duplication and distribution using special processes (e.g. data processing, data carriers, data networks), even partially. Subject to content and technical changes.

3. SAFETY

This chapter provides you with important safety notices when handling the device.

3.1. Intended use

Slimmer is designed for pressing food snacks that are safe to serve and eat in restaurants and food parlors. The temperature can reach 240°C (464°F), any use different from the one hereby described will be considered inconvenient use.



WARNING. An unintended use and/or a different kind of use can lead to injuries and dangers, also excluding any warranty right. A different use from the one we describe here, will then end the right to any claim.

3.2. General safety information



PLEASE NOTE: Read consciously this User Manual and all safety notes before using the machine for the first time. We advise you to keep it for future inquiries.

1. This appliance must be plugged into a specific 220 V or 110 V socket. Please make sure the plug is properly connected before use.
2. Do not share the same power supply with other high-power appliances in case of excessive loads and other hazards.
3. After working or during the use of this product, the temperature of the inner and the outer surface is very hot. Direct contact may lead to scald or injuries.
4. When cooking, the pressure on food will release a lot of steam. Use proper materials to handle (chefs tweezers and spatulas) and do not work too close from the machine to prevent injuries.
5. Close supervision is necessary when using the machine near children. Do not let a child use this machine alone, do not put the product in a place where a child or a baby can reach.
6. Do not touch the power cord with sharp objects or high temperature surfaces; do not damage, bend, stretch or twist the power cord in order to avoid any damage.



7. Check the cord and the plug frequently, in case of any doubt or in front of any sign of damage, stop using the device and return it to the closest authorized repair centre.
8. Install the product safely on a dry, clean and wide and even surface. Do not place the appliance on the edge of a table or on an unstable surface
9. Do not plug in wet hands or immerse cords, plugs or any part of the machine in water or other liquid..
10. Only customer service departments authorized by the manufacturer may carry out repairs on the device, as otherwise the guarantee entitlements will be null and void in the event of any subsequent damages.



DANGER. There is a danger of an electrical shock if live connections are touched, and the electrical or mechanical structure is altered. In addition, functional faults on the device can also occur. Improperly performed repairs can cause considerable dangers for the user.

3.3. Before first use:

- Remove the Slimmer from the box and check that all the accessories are complete.
- Before connecting, check all the connections, wires and plug. Double check the specified power and connection
- To unpack the device, remove the device out of the carton and remove the packaging material. Remove the protective film from the unit.
- Examine the shipment for its completeness and for any visible damages. If identified, immediately notify the carrier, the insurance and the supplier about it.
- The packaging protects the device against damages during transit. The packaging materials are selected in accordance with environmentally compatible and recycling-related points of view and can therefore be recycled.
- Keep the original packaging until you check the correct performance of the Device.
- Please tear off the protective plastic film and wipe the product to remove the possible dust.
- Make sure you have read and understood the whole manual. In the case of having further doubts, please address to our website for more information and videos.

4. OPERATION AND HANDLING


This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages:

4.1. Operation parameters:

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages:

Item name	Volts	Volts	Power	Outline dimension
Slimmer	220V/50-60 Hz	110V/60 Hz	2.4 kW	540x400x305mm

4.2. Control panel

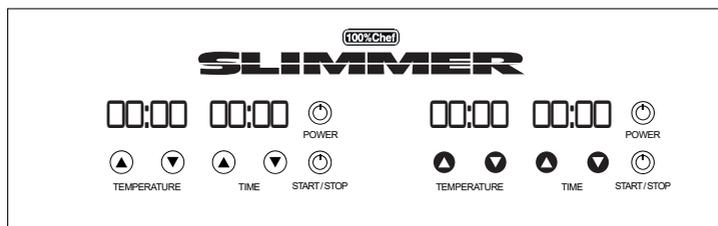

1. Before using, check the connection on the power plug.
2. Connect it to AC220V or AC110V and then press the power button. The panel TEMPERATURE will show the current temperature.
3. Select the desired temperature and time, by clicking the "▲" or "▼" buttons.
 - a. When increasing, ("▲") the temperature or time will increase by 10°C and 10".
 - b. When decreasing, ("▼") the temperature or time will decrease by 1°C and 1".
 - c. Values on the left screens are for the top surface, while the right-hand side shows the values for the bottom surface. You can program them differently (regarding both temperature and time).
4. Once selected the parameters, press the start button to activate the timer. When finished, press the stop button to cease the timer. If the time reaches 0 and the cooking is not yet finished, reset the timer.
5. According to the elaboration of different food and the result you want to reach, time, temperature and pressure will vary. For more information on cooking with the Slimmer, read the Recommended use instructions section. For recipes, ideas and further advice, please visit our website.
6. Switch off and unplug to clean it.
7. When switching on again without unplugging, the values from last cooking will be shown as default.



DANGER. Both the inner and outer surface of the machine will be hot during and after its use.

4.3. Maintenance and cleaning instructions:

- Switch off the device and unplug from the power outlet before cleaning.
- Clean the cooking surface while the Slimmer is still warm (not too high temperature, but some temperature will help you get rid of all the dust, fat and dirt).
- Do not use any abrasive or acid cleaning products.
- Use kitchen soap and a suitable sponge (do not use aluminium or scratch sponges). Rub the surface until the Device is completely clean and wipe the soap off with a soft cloth and water.
- Do not use any sharp or hard object to scrape off stubborn dirt.
- Make sure no dirt nor soap remains on the surface and dry the excess of water.
- Let it dry completely.

5. DISPOSAL OF THE DEVICE

Electric and electronic devices frequently still contain valuable materials. However, they also contain damaging substances, which were necessary for their functionality and safety. If these were put in the non-recyclable waste or were handled incorrectly, they could be detrimental to human health and the environment. Therefore, do not put your old device into the non-recyclable waste under any circumstances.



6. TECHNICAL DATA

- | | |
|-------------------------|---------------------------------|
| • Device | • Pressing iron |
| • Name | • Slimmer |
| • Mains data | • 220 V - 240 V ; 50 - 60 Hz |
| • | • 110 V - 115 V ; 60 Hz |
| • Power | • 2.4 kW |
| • Range of temperatures | • 0 °C - 240 °C / 0 °F - 464 °F |
| • External measurements | • 540 x 400 x 305 mm |



WARRANTY POLICY - POLÍTICA DE GARANTÍA

CSL offers a one-year warranty. While repairing the machine, our technicians will archive every incident or repair to preserve a good use of the machine.

CSL will: repair or, at its option, replace any part of this machine that proves to be defective, at CSL's expense for labor and material.

The purchaser shall be responsible for bearing the cost of replacement labor and material caused by the consumer's misuse and negligence.

The purchaser shall bear the cost of diagnosis when the causes are due to misuse or negligence if he does not accept the repair estimated by our technical office.

Whether within or outside the warranty period, any transportation costs necessary for the repair service, whether delivery and/or return of the appliance, shall be borne by the purchaser.

The operator must use the iron as indicated in this manual; the warranty will not cover possible problems that may appear due to improper use.
